


## Quick-Lock® Unibar® Centralizer Placement Details

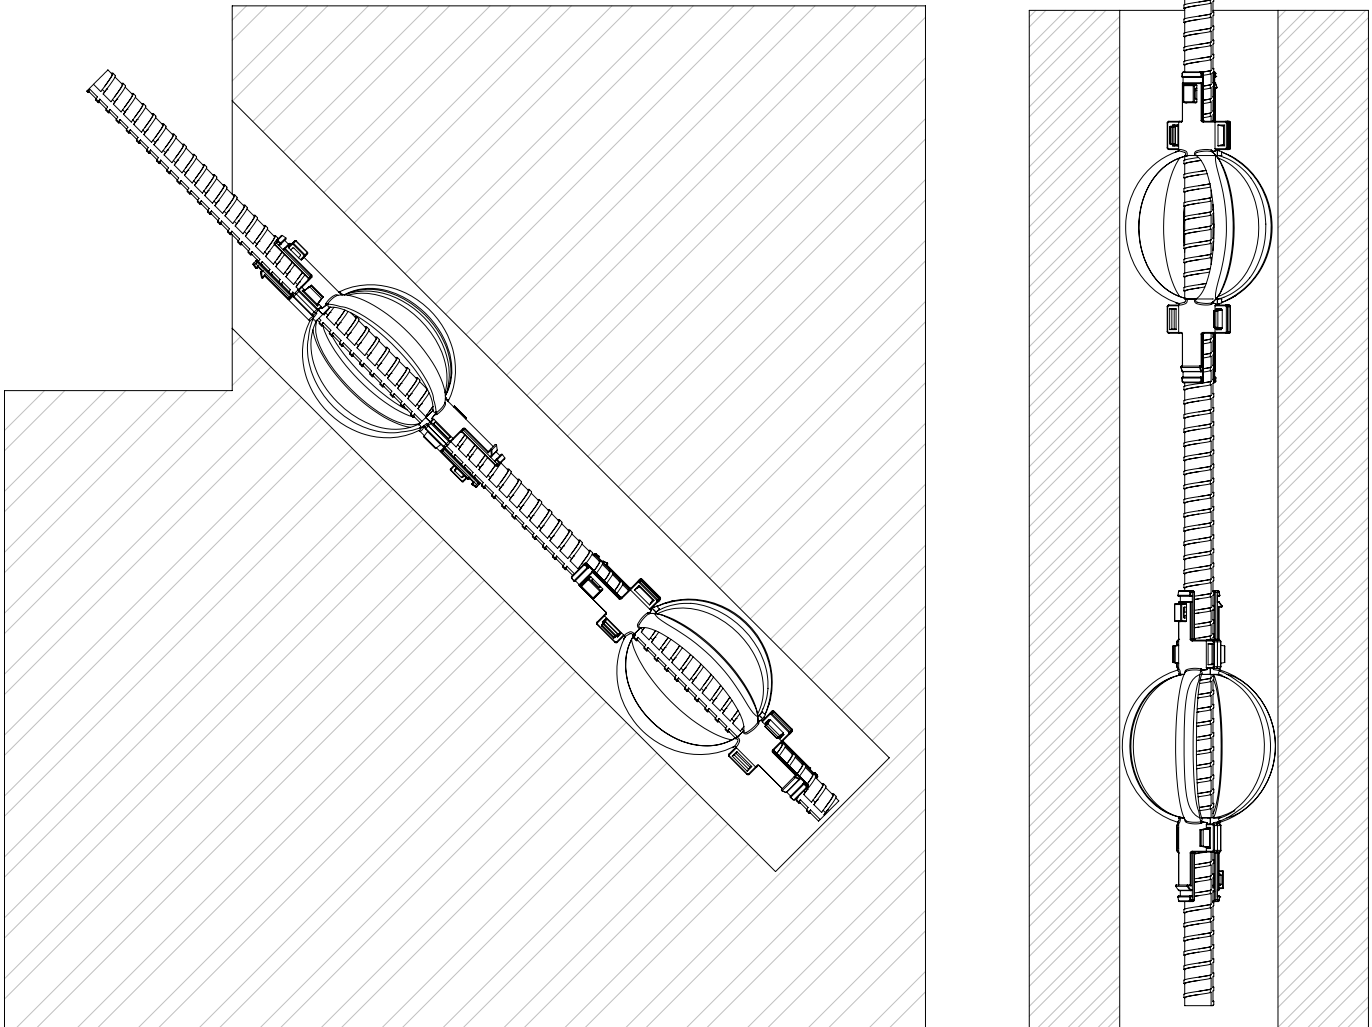

Quick-Lock® Unibar® Centralizer US Patent No. 10,151,113

The lowest Quick-Lock® Unibar® centralizer should be installed approximately 1 foot from the end of the tendon/bar material. Each successive Quick-Lock® Unibar® centralizer should be placed at no greater than 10-foot intervals. The upper Quick-Lock® Unibar® centralizer should be approximately 1 foot below grout/concrete surface.

**PIERESARCH**  
Manufacturer of Quality Concrete Accessories  
Proudly Made in the USA!   
EST. 1986